


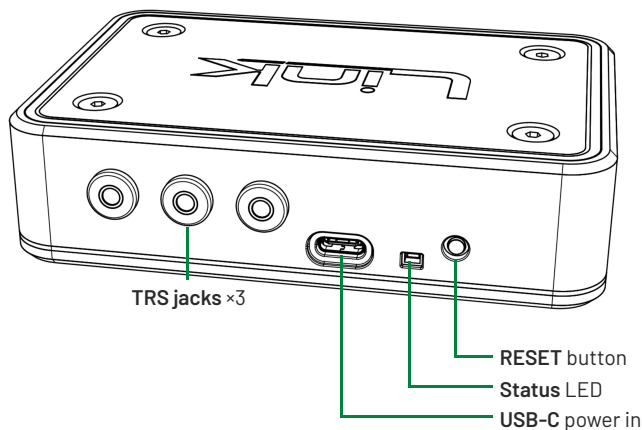

STATUS LIGHT

● Green, steady	All good. Ready to use.
● Amber, slowly pulsing	Starting up, or it cannot find your hi-fi. Check the cable.
● Blue, two quick blinks	Waiting for setup. Do step 2.
○ No light	Link is asleep, or has no power. Press the button to wake it.
● Red, flashing	You are erasing everything. Let go now to stop.

Ten steps take the Link from the box to a working remote on your phone. Have your home Wi-Fi password and the RS232 cable for your amplifier to hand before you start.

CONNECT

01 Power the Link

Connect the USB cable to the USB-C port and any power adaptor with a minimum output of 5 V / 0.5 A. The LED blinks blue: Link is waiting to be set up. If it shows steady green instead, the unit has been set up before – hold the RESET button for five seconds to start over.

SETUP

02 Get the Link app

Scan a code to install the free Link app, then open it and allow Bluetooth. Stand within a few metres of the Link.



APP STORE



GOOGLE PLAY

03 Choose your home network

The app finds the Link and shows the Wi-Fi networks it can see. Choose your home network, enter its password and tap Connect. After about thirty seconds the LED turns steady green and the app opens the remote.

04 No app? Use the hotspot instead!

On any phone, tablet or computer, connect to the Wi-Fi hotspot **Link** with the password **linksetup**. Accept the “no internet” message. A setup page opens by itself; if it does not, start your browser and type **LINK.LOCAL**. Choose your home network, enter its password and tap Connect.

05 Attach the RS232 cable

Connect the RS232 cable to your McIntosh or B&W gear. The device appears on the front page automatically.

YOU NEED

- A phone with the free **Link** app – or any phone, tablet or computer with Wi-Fi
- USB-C cable and a 5 V / 0.5 A power adaptor
- RS232 cable for your McIntosh or B&W gear

USE

06 Take control

Once your amplifier is detected, try changing the volume, muting and selecting different inputs. The app is your remote; on a tablet or computer, any browser works too – go to **link.local**.

07 Choose which inputs are visible

Click the cog wheel in the top right corner and set the configuration for each device.

08 Add a shortcut

Using a browser instead of the app? Add **link.local** to the home screen of your phone, tablet or computer, and it opens like an app.

09 Set the colour scheme

In Configuration / System you can pick a different colour scheme. There are six to choose from.

10 Name your Link

With two or more Links, set up the first one, then give it a name in Configuration / System → Device Name before you set up the next. The name becomes its address, for example **studio.local**.

FACTORY RESET

Hold the RESET button for five seconds or more. The LED flashes red, then goes dark: everything is erased, including the Wi-Fi network and device settings, and the Link returns to its setup mode (blue blinks). Let go when the light goes dark.